# **BLINDO-DOORSTRIKE**

with manual release key

"CLEAN COVER" armored housing for easy surface mounting of all Slim series professional electrical door strikes.

Innovative solution for immediate installation to all types of door, even pre-existing ones.

No cutting the frame no work on internal frame grain!

Only a portable drill is needed to easily install **DRILL&GO** devices on any frame.

That's it, and your door is safely powered.

No more open doors!



#### . THE ELECTRIC LOCKING SYSTEM OF YOUR ENTRANCE CAN BE INSTALLED STRAIGHT AWAY

#### A simple non-removable installation using concealed screws is all that's needed!


All you have to do is install the two elements of the BLINDO-DOORSTRIKE, machined from solid anodised aluminium, to any door, entrance or gate, even pre-existing ones, to have an elegant and "Clean Cover" armored housing. The BLINDO-DOORSTRIKE electric locking system is easy, fast and extremely safe to install. Thanks to its design, it cannot be removed from the outside.

It is the ideal solution in factories, industries, companies, laboratories, offices, public bodies, professional firms, shops, apartment buildings and private homes, wherever remote electric opening via push-buttons, intercoms etc. is required, as well as for entrances that are opened by badges, biometric and/or digital code readers.



If you also require an alarm, a version of the BLINDO-DOORSTRIKE is available complete with RR sensor for remote door status monitoring, open or closed. With the addition of our SLIM-HANDTRONIX module, full professional door management can be implemented, with various timing and monitoring options.




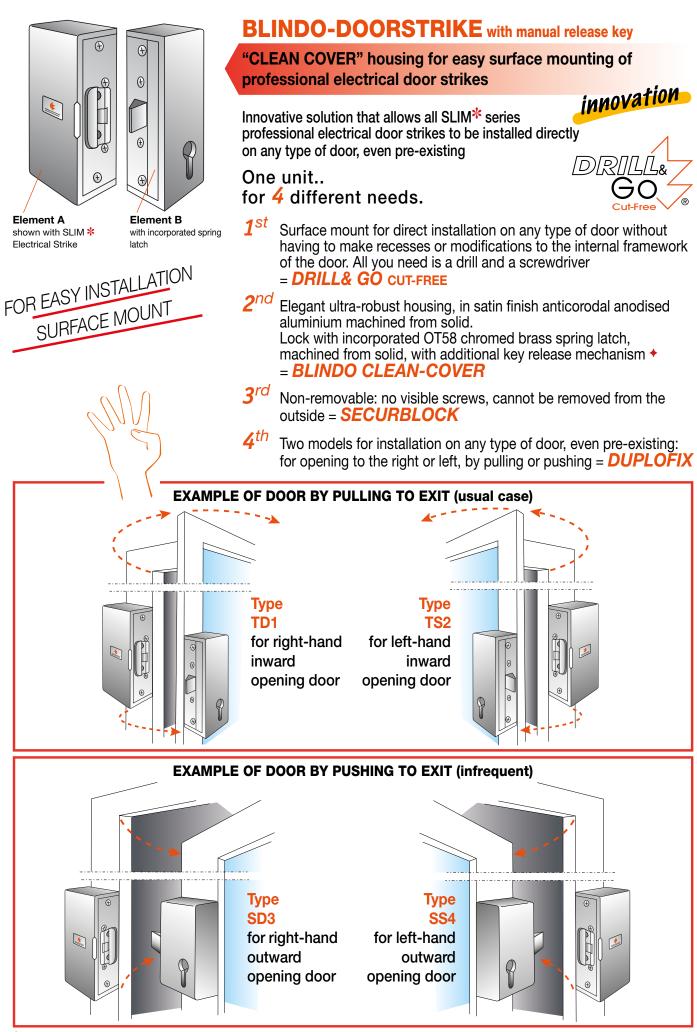


\* Note 1: The SLIM series electrical strike to be inserted in element A should be chosen according to technical requirements (see the models in our SECURITY price list).
\* Note 2: To allow the door to be opened manually too, use a key/key or key/knob type European PZ profile cylinder of any make or model. The length should be chosen according to the thickness of the leaf of the door. The cylinder has to be purchased separately by the installer.

### BLINDO-DOORSTRIKE with manual release key

"CLEAN COVER" armored housing for easy surface mounting of SLIM series professional electrical door strikes. How to install the housing according to the direction in which the door opens - installation inside the protected area.

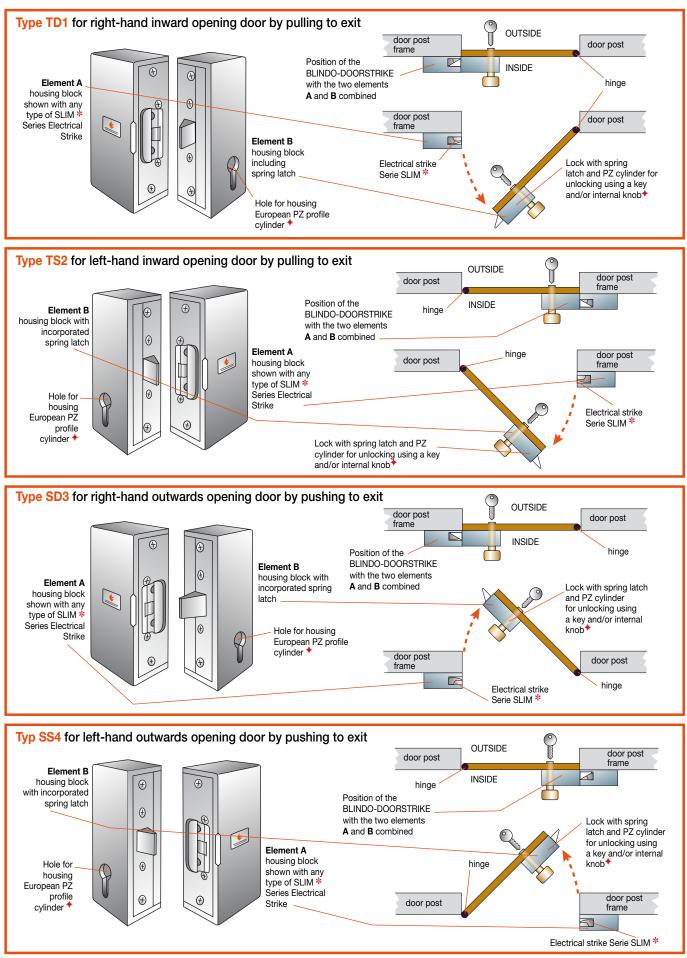

Note 1: The SLIM series electrical strike to be inserted in element A should be chosen according to technical requirements (see the models in our SECURITY price list).
Note 2: To allow the door to be opened manually too, use a key/key or key/knob type European PZ profile cylinder of any make or model. The length should be chosen according to the thickness of the leaf of the door. The cylinder has to be purchased separately by the installer.

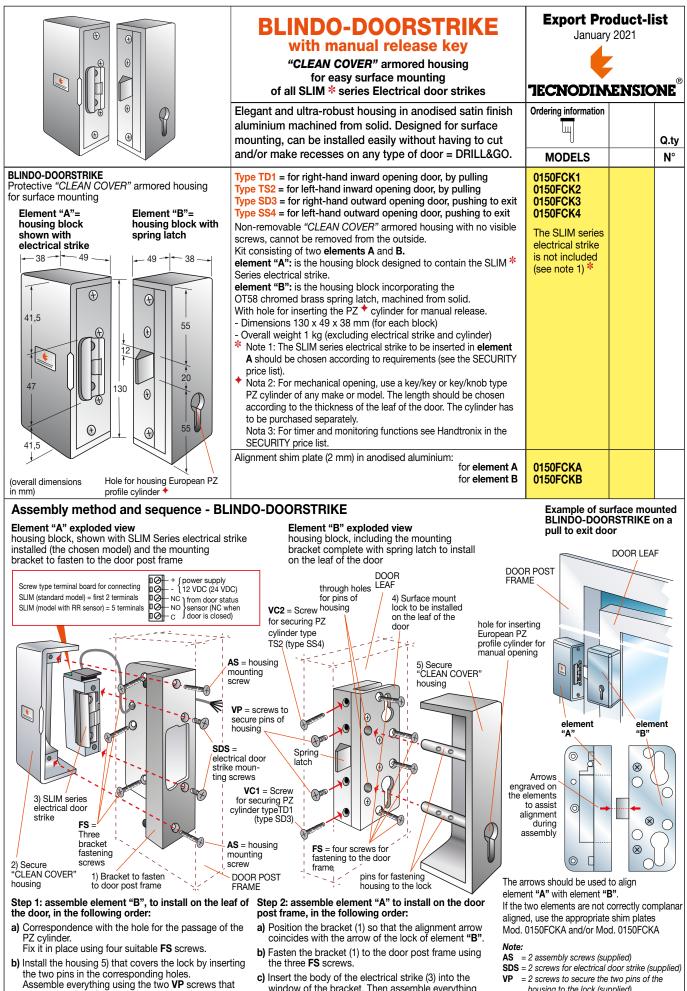

c) Insert the body of the electrical strike (3) into the window of the bracket. Then assemble everything using the two SDS screws to join the two components together.

secure the pins of the housing and join the two

c) Lastly, insert the PZ cylinder and secure it using the

components together.

VC screw, according to the type.

d) Install the housing (2) that covers the bracket (1) and secure it using the two AS screws.

4

housing to the lock (supplied)

= 7 (3+4) fixing and fastening screws, length

= screws supplied with the cylinder (not

and type according to the type of door (not

FS

vc

supplied)

supplied)

## **SLIM series** standard version


## specific ultra-slim professional electrical door strikes to be included in the "CLEAN COVER" armored housing BLINDO-DOORSTRIKE


10 models available: choose the one that best suits your operational needs

Standard version, ultra-slim, mini-symmetrical and ultra-compact								0					Export Pi Janua	<b>roduct-lis</b> ry 2021	t
TECHNICAL SPECIFICATIONS to be included in the "CLEAN COVER" armored housing BLINDO-DOORSTRIKE	OPERATING VOLTAGE	CURRENT DRAW •= 100% ED HEAVY DUTY COIL	0% ED HEAVY DUTY COIL = STANDARD COIL	TUS SENSOR	JS SENSOR over contact	ADJUSTABLE COUNTER LATCH	LEVER "L" = For mechanical unlatching	HOLD UP VERSION - with single pulse the door is open	= version	ersion current	Ra = Reversible asymmetrical Rs = Reversible, symmetrical D = DIN Left S = DIN Right R = Reversible, for surface	ERIES SLIM	TECNODIMENSIONE®		
	OPERATIN		● = 100% ED HE ○ = ○ = STAND	50	<b>"TD" COIL STATUS SENSOR</b> 1 SPDT changeover contact				FAIL-SECURE = version release with current	FAIL-SAFE = "version release without current			Ordering information		Q.ty N°
SLIM ultra-slim "Standard" body only 28 16,5 65,5	This innovative model concentrates in un an-ultra slim body the following advantages: a) Ultra-thin mini-symmetrical body measuring only 16.5 mm b) Mini-symmetrical body with a height of just 65.5 mm (standard type) c) Available also with RR sensor to control the door status (height 73 mm). Ideal to be incorporated into the "Clean Cover" armored housing BLINDO-DOOR- STRIKE with manual key release. For easy surface mounting. Innovative solution for immediate installation to all types of door, even pre-existing ones. Possibility of remotely controlling the door (see models with RR sensor).														
000	BODIES OF ELECTRIC DOOR STRIKES (without BLINDO-DOORSTRIKE armored housing)												Body only, armored housing BLINDO-DOORSTRIKE		
	12V 24V	280 140	•	•		•			•		Ra Ra	SLIM 1 RR SLIM 1 RR	0156J12R 0156J14R		
Body only with RR sensor	12V 24V	280 140	•			•			•		Rs Rs	SLIM 1 SLIM 1	0150J12R 0150J14R		
	12V 24V	280 140	•	•		•				•	Ra Ra	SLIM 3 RR SLIM 3 RR	0158J12R 0158J14R		
	12V 24V	280 140	•			•				•	Rs Rs	SLIM 3 SLIM 3	0154J12R 0154J14R		
	9÷16Vca 9÷16Vca	500	0 0			•		•			Rs Rs	SLIM 2 SLIM 2L	0152J15RA 0153J15RA		
	Adjustment of the counter latch Screw to fix and adjust the counter latch Spring latch Spring latch Spring latch Spring latch Spring latch Spring latch Spring latch Spring latch Max. Adjustable to leave a clearance of 1 mm. Adjustable X1 = 5.5 mm for the standard version								d, the ck not touch. ible	RR microswitch Activation plate for the RR sensor controlling the door status General connection terminal with contacts output for RR sensor					
Example of a SLIM doorstrik (one of any model as abov included into BLINDO-DOO	e listed)					+ 38 - 1 41,5	49		+ 49		<b>→</b>				



Protective "CLEAN COVER" armored housing BLINDO-DOORSTRIKE has to be purchased separately. See SECURITY price list BLINDO-DOORSTRIKE item

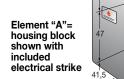

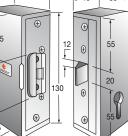

Element "B"= housing block with spring latch